

		Service Intervals (Odometer reading or months, whichever occurs first)															
		Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180
Odometer Reading × 1000 km		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	
OPERATIONS INSIDE THE VEHICLE																	
Check brake pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace air purifier filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Check all lights		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check all controls for correct operation (wipers/washers/ a/c etc)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check seatbelts for damage and correct functions		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
OPERATIONS OUTSIDE THE VEHICLE																	
Check wheel alignment (visual inspection for tyre wear)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I :Every 7,500km or every 6 months															
Check brake shoe linings and drums (drum in disc) for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I :Every 7,500km or every 6 months															
Check brake shoe linings for clearance (vehicles with electric parking brake)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check fuel hoses and pipes for leakage or deterioration		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check tyre pressures		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check wipers rubbers		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
OPERATIONS AFTER ENGINE IS WARMED UP																	
Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace automatic transmission fluid	Normal usage	R :Every 180,000km															
	Severe usage	R :Every 90,000km															
Replace engine oil	JASO classification : "For service DL-1" ACEA classification : "For service C1, C2, C3 or C4"	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		R :Every 7,500km															
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R :Every 7,500km															
Check engine idling speed		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
OTHERS																	
Check body condition for damage		I :Every year															
Perform common rail engine small injection quantity learning		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

(Servicing beyond 225,000km or 180 months should continue to be performed as nominated, commencing from the 30,00km schedule)

NOTE *1: If found any noise from the valve any time, please check the valve clearance.

Severe usage specifications apply to only vehicles used under severe operating conditions. Severe operating conditions include the following cases :

- | | |
|--|--|
| (1) Driving in dusty area. | (6) Towing of a trailer. |
| (2) Driving on rough roads, on submerged roads, or hilly areas. | (7) Use as a taxi or as a rent-a-car. |
| (3) Driving in cold zones. | (8) When more than 50% of the driving is in heavy city traffic and the ambient temperature is 32° or more. |
| (4) Engine idling for a long time, or short-distance travel during cold weather. | (9) When more than 50% of the driving is at 120km/h or more and the ambient temperature is 30° or more. |
| (5) Frequent sudden application of brakes. | |